



CAMEL TROPHY WATCH

INSTRUCTIONS
 ISTRUZIONI PER L'USO
 MODE D'EMPLOI
 GEBRAUCHSANWEISUNG
 INSTRUCCIONES
 BRUKSANVISNING


To maintain the features of precision and reliability of your CAMEL TROPHY ALARM watch unaltered for as long as possible, it is necessary to take a few simple precautions:

- Protect your watch against particularly violent impact, exposure to magnetic fields and sharp changes of temperature which could influence its normal working.
- Change the used-up battery immediately in order to avoid that leakage of corrosive acid damages the movement.
- Always wash your watch with fresh water whenever it has been used in contact with sea water, to avoid the formation of highly corrosive salt deposits.
- From time to time remove traces of dirt from the case using a soft cloth.

Periodically, entrust your CAMEL TROPHY ALARM watch to an authorized dealer for an inspection of the state of the movement and water resistance.

INSTRUCTIONS FOR ALARM, DATE AND TIME SETTING

1. Hour hand.
2. Minute hand.
3. Seconds hand.
4. Alarm indicator hand.

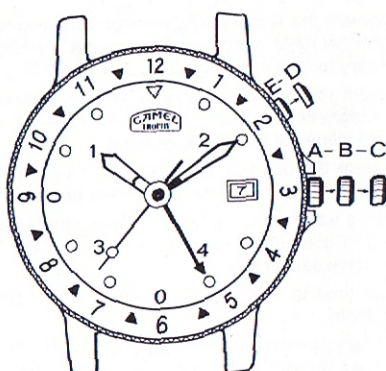

A. Normal position:

NOTE: your CAMEL TROPHY watch is fitted up with a screw crown, before pulling it out, it is necessary to unscrew the crown.

B. Alarm and date setting position:

To set the alarm, bring the crown to position B, by pulling it out gently. Turn it clockwise until the alarm indicator hand reaches the required alarm time.

To set the date, bring the crown to position B, by pulling it out gently. Turn it counterclockwise until the required date appears in the date window.

NOTE: the date will change time the hour hand goes past midnight, i.e. when the hour hand has moved twice around the whole dial.

C. Hour and minute setting position:

To set the time, bring the crown to position A, by pulling it out gently. The seconds hand will stop immediately. Turn the crown to get the desired hour and minutes.

NOTE: after finishing the setting operations and in accordance with a time signal, push back the crown into the normal position and wind it completely. The seconds hand will begin to move again.

— THE ALARM STARTS AND STOPS BY USING THE APPROPRIATE BUTTON —

D. Alarm "start" position:

Pull the alarm button out gently. A mark on the stem of the button will remind you that the alarm is on. When the hour and overlaps the alarm indicator hand, the watch gives out an acoustic signal for 15 seconds, repeated every 3 minutes.

E. Alarm "stop" position:

To stop the acoustic signal, push the alarm button down completely.

NOTE: if the alarm time is modified within 3 minutes of the acoustic signal when the alarm button is in position D, it is necessary to reactivate the alarm by pushing the alarm button in and then pulling it out once again, otherwise the alarm will not sound.

REPLACING THE BATTERY

1. The SR626SW silver-oxyde battery assures that in normal conditions the watch will run for approximately 2 years.
2. The battery must be replaced by an authorized CAMEL TROPHY dealer.
3. When the battery is removed from the watch, it must be kept out of the reach of infants. In case it is swallowed consult a doctor immediately.

SPECIFICATIONS

Case	steel.
Water resistance	10 Atm.
Glass	optic mineral.
Caseback	screwed.
Crown	screwed.
Movement	cal. 6L76 quartz.
Frequency of the oscillator	32,768 Hz.
Accuracy	± 20 sec/month in normal conditions.
Normal operational temperature	—5°C +50°C.
Alarm function	15 sec. "Pi-Pi" repeated several times at 170 sec. intervals.
Alarm accuracy	± 3 minutes.
Battery	SR626SW.
Driving system	step by step motor.

